



## **TUBE REPLACEMENT ON THE YANKEE FAMILY FEEDERS**

1. ***Yankee Flipper Only:*** Turn your Flipper switch to the “OFF” position.
2. Remove the four screws that hold the tube onto the feeding port.
3. Remove the metal cap at the top of the feeder by lifting the cap up the bail wire (handle) and then grasp and pull each end of the bail wire out of the bail rod.
4. Remove the bail rod by laying the tube on a flat surface with the bail rod parallel to the table/floor. Apply pressure to the top of the tube until it becomes oval/oblong in shape to free one side of the bail rod. Reach inside the tube and shimmy the other end out of its hole.
5. Place the new tube on the base and line up the four screw holes and replace the screws. ***Do not overtighten as this will cause the tube to crack especially in hot weather.***
6. Replace the bail rod by lining the bail rod up with both of the designated holes in the top of the tube. Apply pressure to the outside of the tube at both ends of the bail rod until the tube locks into the grooves on bail rod.
7. Replace the cap by inserting each side of the bail wire (handle) back into the bail rod, making sure they are fully inserted before sliding the cap back into place on top of the tube.

*Droll Yankees Inc. • [drollyankees.com](http://drollyankees.com)  
Customer Service: [drollbird@drollyankees.com](mailto:drollbird@drollyankees.com)  
(860) 779-8980 or (800) 352-9164*

