

HOW TO ATTACH YOUR CAGE

Your new cage is designed for use with a tubular bird feeder with a diameter of 2 ½" or 3 ½". If the cover fit is too tight, enlarge the opening using a file.

Attaching cage to a feeder with a removable cap, such as Droll Yankees New Generation® 15" feeder and A-6F (re-introduced 2015) feeder

- 1. Remove the top cap by sliding the cap up the bail wire and pulling each end of the bail wire out of the bail rod.
- 2. Squeeze the tube, slightly oblong in shape, horizontal with bail rod, and reach inside tube and remove the bail rod.
- 3. Slide the clear cover onto the tube.
- 4. Squeeze the end of the spring clamp which enlarges the diameter to fit over the tube and slide it down beneath the holes for the bail rod.
- 5. Install the bail rod by squeezing the tube, slightly oblong in shape, horizontal with both holes which accepts the bail rod and insert bail rod into the holes of tube.
- 6. Replace top cap by inserting each end of the bail wire into the bail rod and slide top cap down into place on the tube.
- 7. Slide the feeder into the cage and attach by installing the black threaded wing nut through the bottom of the cage and into the threaded hole in base of feeder.
- 8. Adjust the position of the spring clamp so that it's holding the cover snugly against the top of the cage.

Attaching cage to a feeder with a fixed cap, such as the Droll Yankees A-6F (original) feeder and B-7F feeder

- 1. Remove the top cap by cutting or straightening the bent ends of the bail wire and pulling the wire up through the bail rod and the top cap.
- 2. Remove the bail rod.
- 3. Slide the clear cover down onto the tube.
- 4. Squeeze the end of the spring clamp which enlarges the diameter to fit over the tube and slide it down beneath the holes for the bail rod.
- 5. Insert the bail rod in the designated holes at the top of the tube.
- 6. Replace the top cap and slide the bail wire through the holes in the top cap and then through the holes in the bail rod.
- 7. Using pliers, bend the ends of the bail wire to 90° angles.
- 8. Slide the feeder into the cage and attach by installing the black threaded wing nut through the bottom of the cage and into the threaded hole in base of feeder.
- 9. Adjust the position of the spring clamp so that it's holding the cover snugly against the top of the cage.