



The Cutest Chickadee Feeder (CUTE)

Droll Yankees feeders can be disassembled for easy cleaning and part replacement.

Cleaning: *Please for the sake of the birds, keep your feeders clean!* Dirty feeders can harm the birds. Use a mild soap & water solution and a soft brush for thorough, simple cleaning. Dry completely before filling with seed, fruit, mealworms or suet.

Disassemble

1. Turn the dish counter-clockwise (viewed from bottom) to remove the threaded end of the rod from the metal insert located in the center of the dish.
2. Slide the 2nd o-ring located underneath the dome off the rod.
3. The dome can now be lowered and removed from the rod. The 1st o-ring, which stops water from dripping down the rod, can remain in place on the rod.

Assemble

1. Slide the dome up the rod to the 1st o-ring.
2. Install the 2nd o-ring by pushing the 2nd o-ring up the rod against the dome.
3. Insert the threaded end of the rod into the metal insert, which is located in center of dish, and turn the dish clockwise (viewed from bottom) until snug. Do not overtighten.

The dome can be positioned lower on the rod to deter larger birds from accessing the feeder.



Droll Yankees Inc. • www.drollyankees.com
Customer Service: drollbird@drollyankees.com
(860) 779-8980 or (800) 352-9164